



Pasta Cooker

MODEL: LPPB

Installation and Operation Instructions

ATTENTION: This manual contains important safety instructions which must be strictly followed when using this equipment.

ATTENTION: These models are designed, built, and sold for commercial use only. If these models are positioned so the public can use the equipment, make sure that cautions, warnings, and operating instructions are clearly posted near each unit so that anyone using the equipment will use it correctly and not injure themselves or harm the equipment.

Catalogue

Foreword.....	3
Safety tips	4-7
Introduction	8
Specifications.....	9
Operation.....	10-12
Cleaning and maintenance	13
Troubleshooting	14-15
Explosion view and spare part list	16-17
Compliance.....	17-18
Circuit diagram	19

Foreword

Congratulations on your purchase of LINCAT commercial cooking equipment. LINCAT takes pride in the design and quality of our products. When used as intended and with proper care and maintenance, you will experience years of reliable operation from this equipment. To ensure the best results, it is important that you read and follow the instructions in this manual carefully.

You must pay attention to the tips before use, it would not be under warranty if it happened as follows:

- *The instructions in this manual have not been followed correctly.
- *Non- authorised personnel have tampered with the machine.
- *Non-original spare parts are used.
- *The appliance has not been handled and cleaned correctly
- * The appliance has been used for a purpose for which it was not intended.
- *The appliance is used for commercial only.
- * Acts of God, fire, water damage, burglary, accident, theft.

Safety Tips

WARNING: Improper installation, adjustment, alteration, service, or maintenance can cause property damage, injury, or death. Read the installation operating and maintenance instructions thoroughly before installing or servicing this equipment.

CAUTION: These models are designed, built, and sold for commercial use only. If these models are positioned so the public can use the equipment, make sure that cautions, warnings, and operating instructions are clearly posted near each unit so that anyone using the equipment will use it correctly and not injure themselves or harm the equipment.

WARNING: A factory authorised agent should handle all maintenance and repair. Before doing any maintenance or repair, contact LINCAT.

Appliances placed on the table when use, it is forbidden to put it on the floor.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified people to avoid a hazard.

Ensure water levels are maintained above the minimum indicated level in the Pasta cooker. Failing to maintain the required level may result in element failure.

The Water Pan should not be covered during use.

Avoid skin contact with hot water; hot water can cause serious damage to the skin.

The appliance shall not clean with a water jet and steam cleaner, the appliance or part must not be immersed.

The LINCAT Pasta cooker does not contain any user-serviceable parts. LINCAT dealers, service agents, or qualified electricians should carry out any necessary repairs.

Do not remove any components or service panels on this product.

The manufacturers of LINCAT products take every care to ensure that all products are safe. Steel cutting procedures used to manufacture these items result in sharp edges. These sharp edges are removed to the best of our ability; however, we still insist the operator takes care when in contact with this piece of equipment.

Switch off the Pasta cooker and remove the plug from the power socket before cleaning, draining water, or filling with water.

Before filling with new water or cleaning every time, please cool water to room temperature for hot water can cause serious damage to the skin.

Children should be supervised to ensure they do not play with the appliance.

The appliance is not intended for use by people (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

LOCATION OF DATA PLATE

The data plate is located on the side panel.

IMMEDIATELY INSPECT FOR SHIPPING DAMAGE

All containers should be examined for damage before and during unloading. The freight carrier has assumed responsibility for its safe transit and delivery. If the equipment is received damaged, either apparent or concealed, a claim must be made with the delivery carrier.

A) Apparent damage or loss must be noted on the freight bill at the time of delivery. It must then be signed by the carrier representative (Driver). If this is not done, the carrier may refuse the claim. The carrier can supply the necessary forms.

B) Concealed damage or loss if not apparent until after equipment is uncrated, a request for inspection must be made to the carrier within 15 days. The carrier should arrange an inspection. Be certain to hold all contents and packaging material.

Installation and maintenance should be performed by a qualified installer who thoroughly read, understand, and follow the instructions.

If you have questions concerning the installation, operation, maintenance, or service of this product, contact LINCAT.

Equipotential symbol:




All the product of Lincat has been checked and test strictly before Delivery.

Introduction

Lincat Pasta cooker are mainly consists of the following seven components:

- *Head unit
- *Lid
- *Basket
- *Drain tap
- *Pasta cooker body
- *Water pan
- *Manual

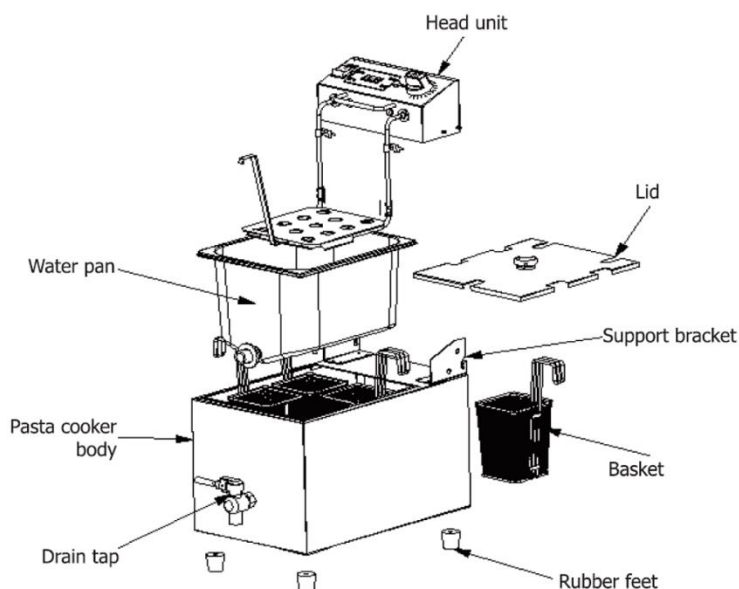

If you found missing or damaged any of parts upon receipt of the appliance, please contact your supplier immediately.

Specifications

Model	Voltage(V)	Power(W)	Pan (L)	Dimensions (mm)		
				Wide	Deep	Hight
LPPB	220-240V 50HZ	2900	8	280	510	440

Operation

It is the user's responsibility to ensure compliance with the codes of use and safety regulations relating to product placement, installation, electrical safety, and fire prevention.

Place the appliance on a flat workbench which is more than 20cm larger than the maximum projection of the appliance. Do not place the appliance on the ground.

Ensure that the amount of water is between the highest and lowest water levels. Please refer to page 9 to determine the amount of water.

Please Refer to page 9 of this manual to choose the correct power supply.


1. Connect the appliance to the mains power supply.
2. Set the thermostat to the desired temperature. The amber power indicator light turns On.
3. The appliance begins to heat the water.
4. Once the water is at the set temperature lower the food into the water using the basket supplied.
5. Remove the basket from the water once the food is cooked. Shake gently above the water pan to remove any excess water.

A temperature setting of between 100 and 212 F degrees centigrade will be sufficient for most cooking. However, this may vary for special food types or according to individual requirements.

WARNING: The food and water are very hot! Take care when removing the basket as water may drip.

Using the Timer

The digital with audible alarm can be set from 1 second to 15 minutes

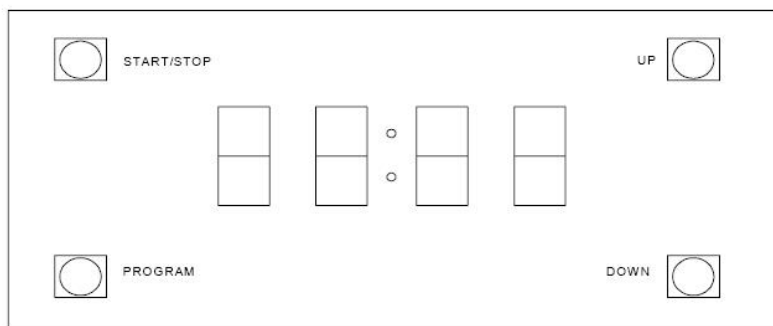

The timer provides an audible alarm, after the set time expires, the unit will switch off.

START/STOP: Press START/STOP to start timer, press again to stop. The timer will provide an audible alarm after the set time. The alarm will beep 10 times, and the display will continue to flash until the timer is reset (press the START/STOP button)

UP: Press UP to add extra time

DOWN: Press DOWN to reduce time

PROGRAM: There are a total of 6 programmable timer settings. The default factory program settings are given below

Program	1	2	3	4	5	6
Factory Preset Time	00:30	01:00	01:30	02:00	02:30	03:00

To change the length of a program, select the program you want to change by scrolling using the PROGRAM button. Adjust the program time by using the UP and DOWN buttons. Press START/STOP to

commence the countdown. The new program time will be automatically stored.

If the unit is left without power for more than 24hrs the timer settings will revert to the factory defaults

Cleaning And Maintenance

The appliance should be cleaned after each day's operation; however, it may require cleaning more often, depending on the use.

- Always turn Off the appliance and disconnect from the power supply before cleaning.
- Always allow the water to cool before cleaning.
- Check the temperature with a suitable probe thermometer; 40°C is the MAXIMUM temperature at which water should be removed.
- For best performance, Lincat recommend that the appliance is cleaned after each day of operation.
- Remove the head unit for ease of cleaning.
- Empty the water to clean the appliance thoroughly.
- Use a suitable detergent to clean the interior of the appliance.
- Use warm, soapy water and a damp cloth to clean the exterior of the appliance.
- Dry thoroughly after cleaning, ensure there is no water left in the Pasta cooker.
- Qualified technician should carry out repairs if required.

Note: Failure to clean the appliance regularly may result in premature activation of the thermal cut-out switch.


Note: The control box cannot be immersed in water but can be wiped down with a damp cloth.

WARNING: DO NOT remove the water pan until AFTER it has been emptied.

Troubleshooting

Problem	Cause	Remedy
The appliance is not working	The appliance is not switched on	Check the appliance is plugged in correctly and switched on
	Plug and lead are damaged	Call agent or qualified technician
	Fuse in the plug has blown	Replace the plug fuse
	Power supply	Check power supply
	Internal wiring fault	Call agent or qualified technician
	Thermal cut-out activated	Reset thermal cut-out
	Safety switch not located properly	Refit head unit
Appliance does not reach set temperature	Faulty thermostat	Call agent or qualified technician
	Faulty element	Call agent or qualified technician
	Build-up fat on the element	Clean the appliance
Appliance heats up but indicator light does not come on	The light indicator has expired	Call agent or qualified technician
Power indicator light comes on, but appliance does not heat up	Faulty element	Call agent or qualified technician
	Faulty thermostat	Call agent or qualified technician
	Thermostat set incorrectly	Check thermostat
Appliances slow to heat up	Faulty element	Call agent or qualified technician
	Build-up fat on the element	Clean the appliance

Thermal Cut-Out Reset

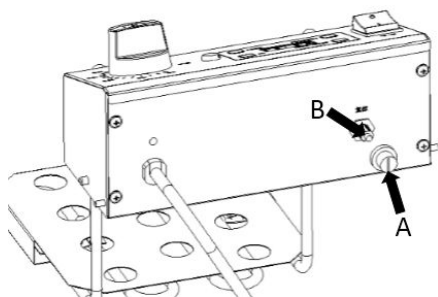

Lincat Pasta cookers are fitted with a Thermal Cut-Out safety feature. Should the temperature exceed safe levels the appliance will automatically cut power.

To reset the appliance after a sufficient cool-down period:


1. Unscrew the cover of the Safety Cut-Out reset switch.
2. Press the small reset switch down until it clicks, using a blunt pointed instrument.
3. The appliance is now reset and can be used as normal.

If the Lincat Pasta cooker does not operate, please check the following before placing a service call.

- It is connected to the correct power supply.
- The machine is plugged in correctly and power is switched on.
- The thermostat dial has been set to the required temperature.

Explosion View And Spare Part List

MODLE: LPPB

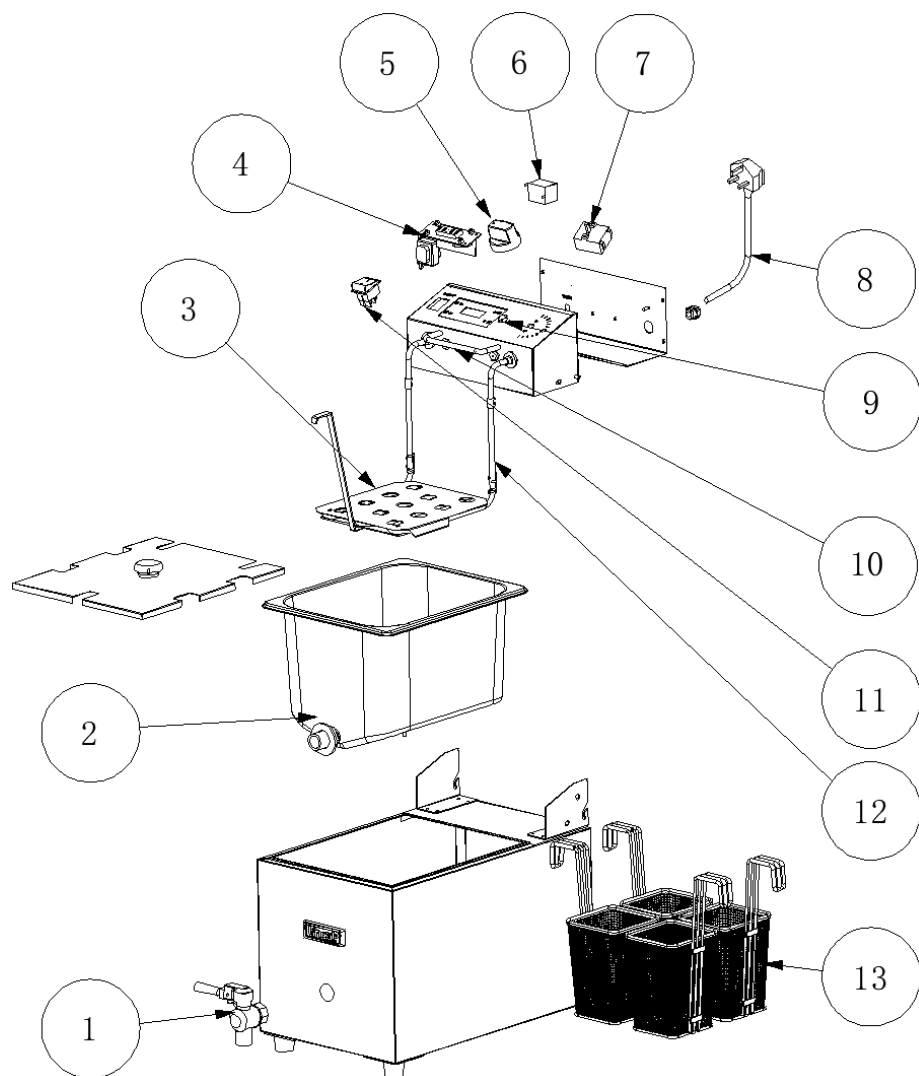

No	Pin No.	Name	QTY
1	10208.6002	Faucet	1
2	20302.6062	Pan	1
3	20707.6078	plate	1
4	20302.6111	Transformer	1
5	10704.6268	Knob	1
6	10106.6004	Thermal cut off	1
7	20302.6187	Thermostat	1
8	20302.6137	Power cord	1
9	10107.6002	Indicator Light	1
10	10206.6055	Tube	1
11	10105.6017	Switch	1
12	10901.6065	Heating Element	1
13	10205.6046	Basket	4

Compliance

The WEEE logo on this product or its documentation indicates that the product must not be disposed of as household waste. To help prevent possible harm to human health and/or the environment, the product must be disposed of in an approved and environmentally safe recycling process. For further information on how to dispose of this product correctly, contact the product supplier, or the local

authority responsible for waste disposal in your area.

Lincat parts have undergone strict product testing to comply with regulatory standards and specifications set by international, independent, and federal authorities.


Lincat products have been approved to carry the following symbol:



All rights reserved. No part of these instructions may be produced or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of Lincat. Every effort is made to ensure all details are correct at the time of going to the press, however, Lincat reserves the right to change specifications without notice.

Circuit Diagram

Model: LPPB

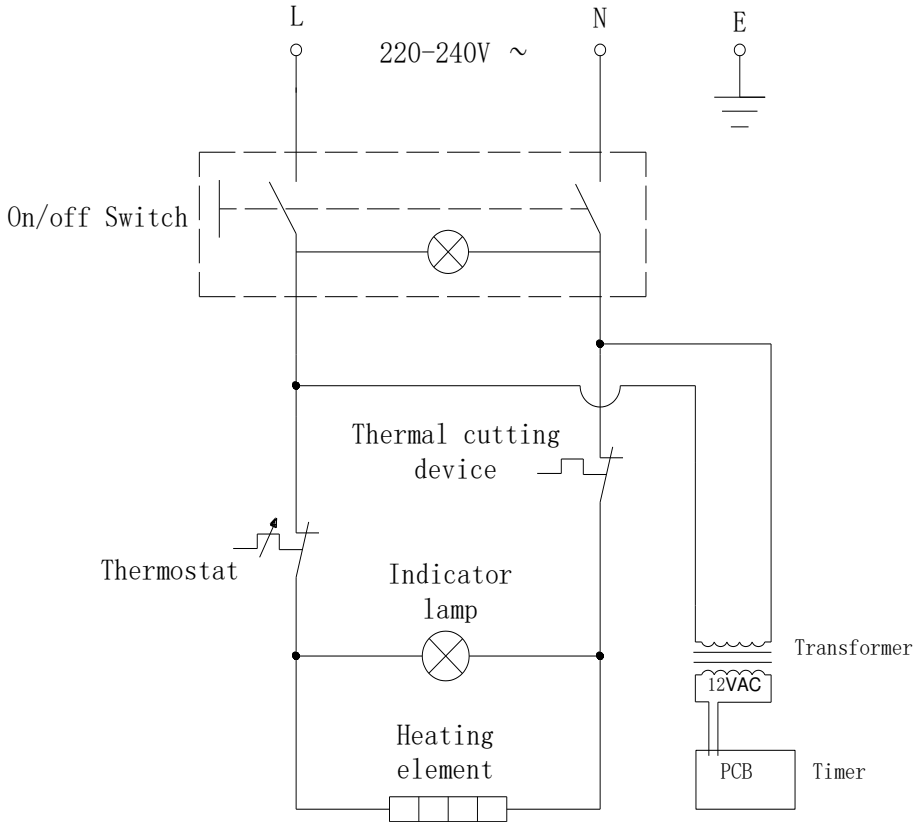

This circuit diagram has been provided to assist qualified electricians, only Lincat service agents or qualified electricians should carry out repairs if required.

Do not remove any components or service panels on this product.

PLEASE RETAIN THE MANUAL CAREFULLY FOR
REFERENCE

WARNING

Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury, or death. Read the installation operating and maintenance instructions thoroughly before installing or servicing this equipment.

ATTENTION

Under the warranty period of the appliance, all the parts must be replaced by an authorised service provider which is approved by Lincat, if not, the warranty may be void.

ATTENTION

Any parts that aren't made by Lincat may void warranty.

ATTENTION

Lincat and manufacturer of Lincat keep the right to modify the product.

Lincat Limited

Whisby Road Lincoln LN6 3QZ United Kingdom

Lincat

Version A